


APPLICATION Hydrotite


1. Wall joints

Position CJ centrally or towards either edge if preferred.

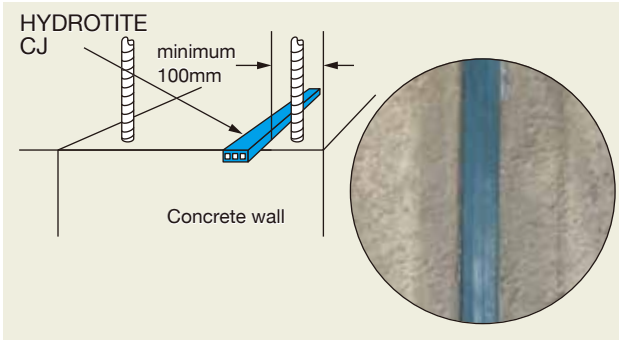


2. Joints of lining concrete for NATM Tunnel & Shield Tunnel

N.A.T.M. (New Austrian Tunneling Method)

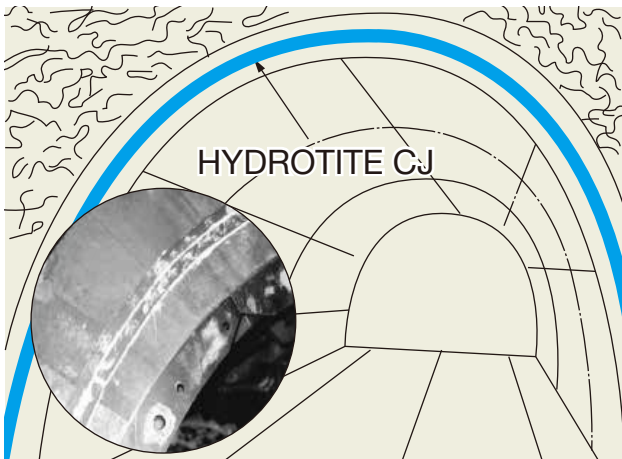


3. Pipes passing through concrete

Position CJ around pipes and other fittings passing through concrete.

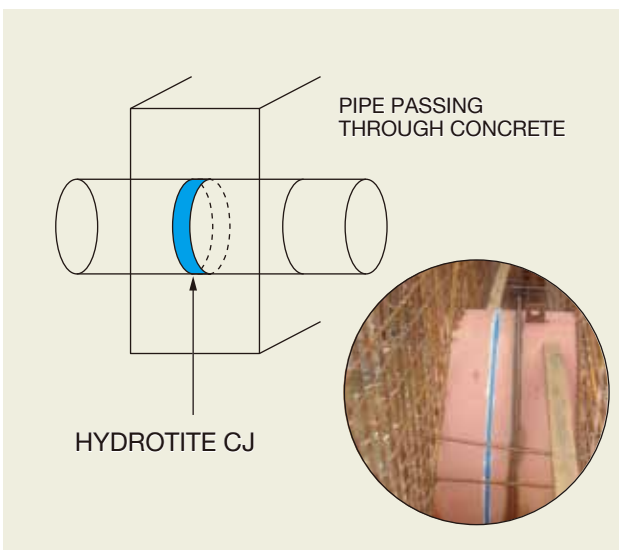

4. Slab joints

Position CJ centrally or towards either edge if preferred.

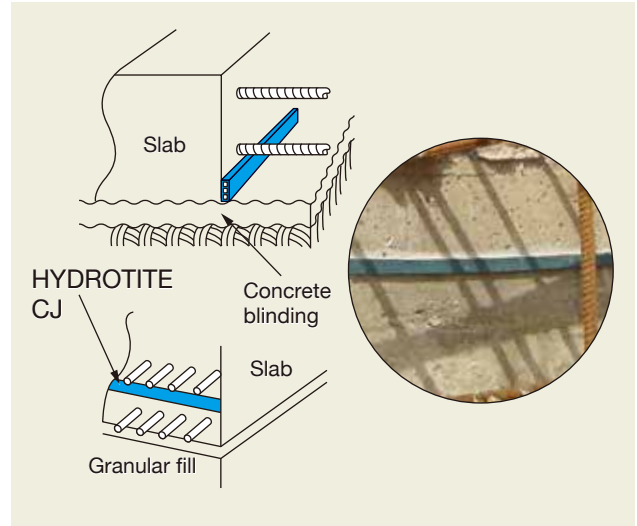

5. Precast concrete joints

(Box culvert, precast concrete panels)

Profile thicker than the design gap dimension should be selected from the profile list for best results.

Adhere CJ to the groove with Neoprene adhesive continuously.

Precast concrete panels should be connected with bolts each other.

